



Device description

USB to RS485 converter for upgrading devices without USB or LAN connector.

PxFlasher software is provided with the device, available to download from manufacturer's page (<https://pxm.pl/>).

Connection diagram

