


## PX787 update from firmware version 1.1.470 to 2.0.0

Firmware update to version 2.0.0 resets all converter settings to default. Table of DMX addresses that have been assigned to the selected DALI ballasts, groups or broadcast channel is cleared. In order to keep the assigned DMX addresses to the DALI addresses, export the configuration file from the device when it still has firmware version 1.1.470 (or lower) on it, and then upload the configuration file after updating the firmware to version 2.0.0.

### In 1.1.470 (or lower) version:

1. Download the file with the update to version 2.0.0 from the manufacturer's website.
2. Go to the converter management web interface by entering the device's IP address in the browser.
3. Go to the *Admin* tab.
4. Export the configuration file by clicking *EXPORT*.

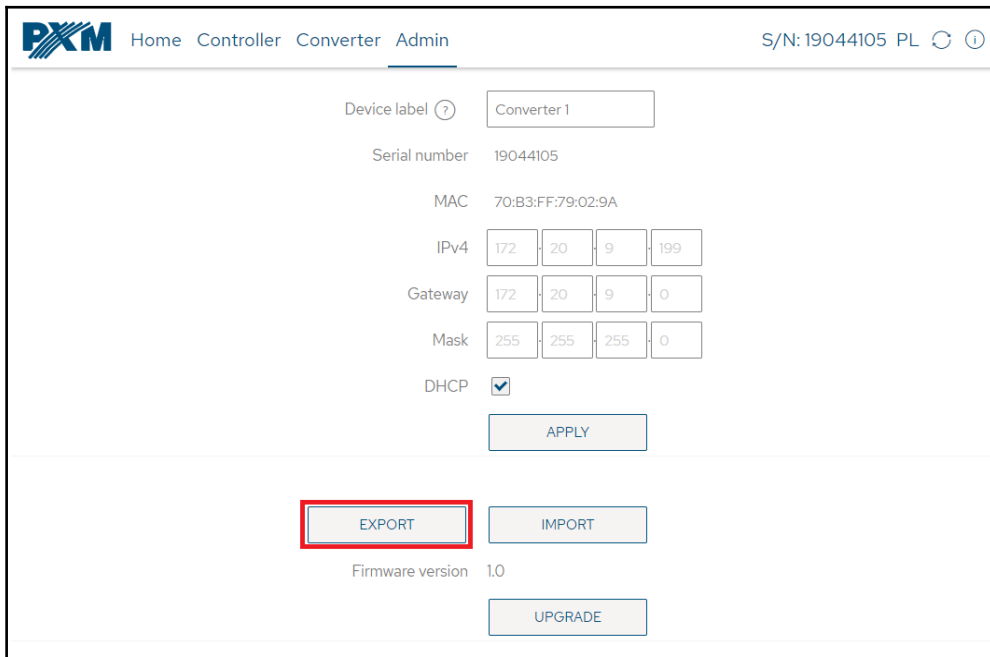

The screenshot shows the 'Admin' tab of the PX787 web interface. The breadcrumb navigation is 'Home > Controller > Converter > Admin'. The device information is as follows:


- Device label: Converter 1
- Serial number: 19044105
- MAC: 70:B3:FF:79:02:9A
- IPv4: 172.20.9.199
- Gateway: 172.20.9.0
- Mask: 255.255.255.0
- DHCP:

Buttons visible include 'APPLY', 'EXPORT' (highlighted with a red box), 'IMPORT', and 'UPGRADE'. The 'Firmware version' is displayed as 1.0.

5. Update the device by clicking *UPGRADE* and select the location of the file with the update to version 2.0.0.

### In 2.0.0 version:

6. Go to the converter management web interface by entering the device's IP address in the browser.
7. Go to the *Settings* tab.
8. Import the configuration file by clicking *IMPORT*.

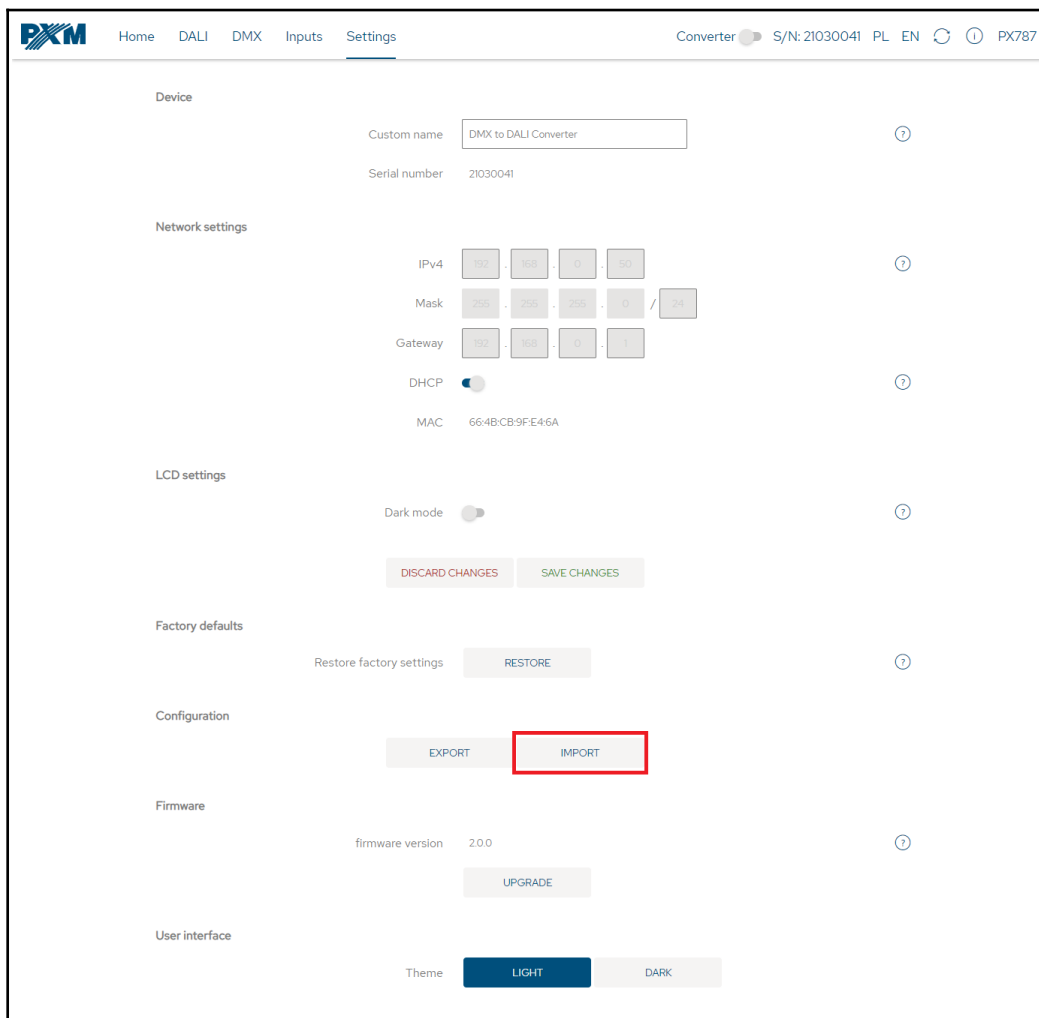

9. Upload previously exported configuration file – the device will automatically recognize the new configuration version and convert it accordingly.