



## USB/RS485 Interface

### Device description

#### USB converter to RS485

It is used to upload firmware updates to devices that are not equipped with a USB connector or LAN.  
The converter works with an application that has been made available - PxFlasher.

### Connection diagram

