PX254 PX254-CC Driver LED C.V. 3 x 6A Driver LED C.V. 3 x 6A/cc _{User manual}



Table of Contents

1 Description	4
2 Safety conditions	5
3 Connector and control elements	6
4 Designation of displayed messages	7
5 Button features	8
6 Group DMX address settings	8
7 Individual DMX address settings	9
8 Color settings mode	10
9 No DMX signal response	13
9.1 Description of programs	
10 Master / Slave function	
11 White balance	18
12 Limiting the output power	19
13 Smooth	20
14 Light control frequency	21
15 Screen saving (screen blanking)	22
16 Default settings and device errors	22
16.1 Restore default settings	23
16.2 Error message	
17 Display function	
18 DMX signal connecting	25
19 RDM – available parameters	
20 Programming	29
21 Connection scheme	
22 Dimensions	
23 Technical data	

Manufacturer reserves the right to make modifications in order to improve device operation.

PXM Marek Żupnik sp.k.
Podłęże 654
32-003 Podłęże
BDO register number 000005972

tel. +48 12 385 83 06 mail: info@pxm.pl www.pxm.pl

Rev.3-0 03.06.2019

1 Description

PX254 driver is designed to control the LEDs. Built-in DMX receiver allows to control 3 DMX channels.

(R, G, B) directly with the DMX protocol. Wide range of power supply voltage and high current carrying capacity outputs (6A) permit a control of large quantities of LEDs. What is more the PX254 has built-in fuses that can be replaced by the user by himself.

PX254 can be either controlled by DMX, and act independently. In this case, the user is offered a fully programmable scene and 18 pre-programmed sequences, which can also freely change the playback speed and fluidity changes in steps. Thanks to the interpolated resolution of the output control at the 16 bit level, the control of the parameters of individual channels is completely smooth. Driver PX254 can operate in different control modes: 2b – brightness and one of the 256 colors define by the manufacturer, 3b – each color RGB can be set separately, 3bd – each color RGB can be set separately, 3bS – each color RGB can be set separately and dimmer (dimming all outputs), 3bS – each color RGB can be set separately, frequency "strobo" and fill factor, HSL – responsible for hue, saturation and lightness, dW – dynamic white (tunable white), control channels cold and warm white, *EFF* – it is available on 7 DMX channels and control R, G, B, Mode, Speed, Fade and Brightness.

The driver has a built-in tuning frequency signal system ("*flicker free*" technology), which makes it particularly useful in applications for the television industry. The RGB LEDs often differ quite substantially in parameters, this can cause problems in obtaining a white color (at full power

4

especially). Therefore PX254 comes with a very useful function called "white balance". Thanks to it you can choose color correction for each set of LEDs controlled by the device to achieve at full power the color white.

The PX254 is produced in common anode version – it allows LEDs connection on common anode.

Driver comes in two versions: standard – version controlling LED lamps with a common anode, CC – version controlling LED lamps with a common cathode.

2 Safety conditions

PX254 is a device powered with safe voltage

7 - 24V; however, during its installation and use the following rules must be strictly observed:

1. The device may only be connected to 7 – 24V DC with current-carrying capacity compatible with technical data.

2. All the conductors should be protected against mechanical and thermal damage.

3. In the event of damaging any conductor, it should be replaced with a conductor of the same technical data.

4. Connection of power supply can only be made with a conductor of minimum cross-section area of 2,5mm² and DMX signal with shielded conductor.

5. All repairs and connections of outputs or DMX signal can only be made with cut off power supply.

6. PX254 should be strictly protected against contact with water and other liquids.


7. All sudden shocks, particularly dropping, should be avoided.

8. The device cannot be turned on in places with humidity exceeding 90%.

9. The device cannot be used in places with temperature lower than 2°C or higher than 40°C.

10. Clean with damp duster only.

3 Connector and control elements

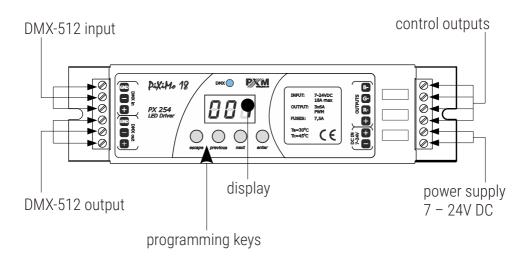

4 Designation of displayed messages

DMX address of a device - a basic item in the MFNU 888 888 setting parameters for all channels simultaneously setting parameters for each channel individually 888 888 inverting the meter display 180 degrees DMX address setting 888 888 control method selection (RGB, Lightness / Color, etc.) no DMX signal response method selection 888 Master / Slave mode settings 888 Lightness / Color control mode 888 RGB control mode 888 888 RGB Dimmer control mode RGB Shutter control mode 888 888 HSL control mode – Hue / Saturation / Lightness 888 effect control mode dynamic white mode 888 888 all outputs at 100% all outputs off 888 888 scene program no. 17 888 888 DMX address settings for first channel Master mode on / off 888 888 number of channels being sent in the Master mode white color balance setting 888 red balance 888

- **BEB** green balance
- BBB blue balance
- **BBB** white color balance on / off
- **BBB** program playback speed
- **EBB** level of steps change smoothness in the program
- **BEB** red color during scene programming
- **BRR** green color during scene programming
- **BEB** blue color during scene programming
- **EEB** basic frequency of brightness control
- **BBB** screen blanking
- **EBB** memory error message
- **BEB** restore default device settings menu

5 Button features

- escape goes back to the previous MENU level or discards changes made
- *previous* scrolls to the previous feature on the same MENU level or decreases the parameter's value
- *next* scrolls to the next feature on the same MENU level or increases the parameter's value
- enter enters the next MENU level and confirms changes made


6 Group DMX address settings

The menu of the PX254 driver allows for setting the DMX address within a range between 1 and 506 – 511 depending on work mode of device.

For example in RGB mode it occupies three consecutive DMX addresses. If start address is set to 510, the last channel is occupied by address 512.


To set the DMX address:

- 1. Set the "Adr" function.
- 2. Use the "next" or "previous" buttons to set the selected DMX address.
- 3. Push the "*enter*" button to confirm choose.



7 Individual DMX address settings

The PX254 module has an option that allows for changing individual settings. It enables assigning any DMX address to every output channel. The simplest example of implementation of this function is to control the lightness of one-color LEDs connected to all outputs. In such case, the same address must be assigned to all channels so that all outputs are controlled by one slider on the control panel.

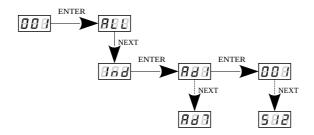

8 Color settings mode

888 888 NEXT 888 The PX254 driver can operate in different control modes. NEXT Depending on the selected mode, the devices takes up a different 888 NEXT numbers of channels, possible modes: 888 The **HSL** mode (Hue, Saturation, Lightness) operates on three NEXT channels, responsible for hue, saturation and lightness 858 The **3bd** mode (4-channel, 4-byte) allows for setting each colour NEXT individually: R (red), G (green), B (blue) and on the fourth channel, 888 the Dimmer function is implemented – dimming all outputs NEXT The **3bS** mode(3 RGB channels + Shutter) 6-channel mode allows 888 to set each colors separately on channels 1 – 3: R, G, B, and has an additional Shutter function. Channels 4 and 5 are responsible for frequency, of which channel 4 is responsible for roughing frequency (MSB) - not very accurate and channel 5 for accurate (LSB) - for precise setting of the desired frequency after set roughing frequency. The frequency range is 5 - 365Hz. The channel number 6 corresponds to the fill factor in this mode and can be set in range 0 - 100, where 0 is complete switching off all outputs, 50 is equal switching on and off times, setting to 100 causes continuous lighting.

ENTER

888

ENTER


888

888

NEXT

ENTER

Example:



where 1 means the outputs are on and 0 are off

The *3b* mode (3-channel, 3-byte) each color (R, G, B) can be set separately

The *2b* mode (2-channel, 2-byte) consists in selecting lightness and one of the 256 colors define by the manufacturer

The dW – dynamic white – control of channel: cold white + warm white, by means of two DMX channels. The first DMX channel is responsible for color temperature and the other channel – for lightness.

The *EFF* mode – effects control – it is available on 7 DMX channels and allows to choose the right effect and parameters (description of the *EFF* mode is on the next page)


Description guide of *EFF* mode settings

CHANNEL 1 RED	CHANNEL 2 GREEN	CHANNEL 3 BLUE	CHANNEL 4 MODE	CHANNEL 5 SPEED	CHANNEL 6 FADE	CHANNEL 7 BRIGHTNESS
-	-	-	<0-7> Program 1	х	x	Х
-	-	-	<8–15> Program 2	х	х	Х
-	-	-	<16–23> Program 3	Х	х	Х
-	-	-	<24–31> Program 4	х	х	Х
-	-	-	<32–39> Program 5	х	х	Х
-	-	-	<40–47> Program 6	Х	х	Х
-	-	-	<48–55> Program 7	х	х	Х
-	-	-	<56–63> Program 8	Х	х	Х
-	-	-	<64–71> Program 9	Х	х	Х
-	-	-	<72-79> Program 10	Х	х	Х
-	-	-	<80-87> Program 11	Х	х	Х
-	-	-	<88-95> Program 12	Х	х	Х
-	-	-	<96-103> Program 13	Х	х	Х
-	-	-	<104–111> Program 14	Х	х	Х
-	-	-	<112–119> Program 15	Х	Х	Х
-	-	-	<120–127> Program 16	Х	Х	Х
-	-	-	<128–135> Program 17	х	х	Х
-	-	-	<136–143> Program 18	Х	х	Х
-	-	-	<144-151> OFF	-	-	-
Х	х	x	<152-169> Strobo 10%	х	-	Х
х	х	х	<170-199> Strobo 20%	х	-	Х
Х	х	x	<200-229> Strobo 50%	х	-	Х
х	х	x	<230-255> RGBD	-	-	Х

- Channel 1 red color
- Channel 2 green color
- Channel 3 blue color
- Channel 4 operating mode selection
- Channel 5 speed settings (higher value quicker changes)
- Channel 6 fade settings (higher value smoother transition)
- Channel 7 lightness settings (higher value stronger glow)
- *sign "x"* possibility to control a given parameter of a selected mode
- sign "-" no possibility to control a given parameter of a selected mode

9 No DMX signal response

This function is used both to protect the installation against the DMX signal loss and to obtain control over LEDs without connecting an external controller. Once it is activated, if there is no DMX signal the module will realize a desired function independently. Reconnecting the DMX signal will automatically break the realized function and the module will once again follow the commands transmitted via the DMX line.

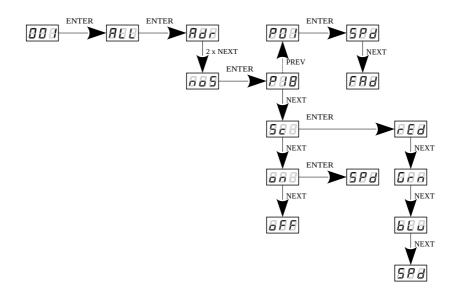

P01 – P18 – choosing a ready program provided in the device software. For each program it is possible to set the speed (SPd) of the effects reproduction on range 0,1 – 99,9s and smoothness of change of steps (FAd) in range 0 – 100, where 0 is a step transition, and 100 completely smooth.
Sc –self-programmed scene in which it possible to set values for RGB colors (rEd, Grn, bLu) in range 0 – 255 for each color separately. Additionally can set the scene entry time (SPd) after decay DMX signal in range 0,1 – 99,9s.
on – activation of all outputs at 100% with the possibility of setting the switch-on time (SPd) all outputs after decay DMX signal
oFF – disabling all outputs after DMX signal loss

9.1 Description of programs

The following tables show the values for each output channel (R, G, B) in programs from 1 up 18 (P01 - P18). The value 255 corresponds to the maximum lightness level on a given channel, 127 - 50% of power level, 0 - full channel blanking.

		P01	P02	P03	P04	P05	P06	P07	P08	P09
	R	255	0	0	0	255	255	0	255	0
Step 1	G	0	0	0	0	0	0	255	0	255
	В	0	255	0	0	0	0	255	0	0
	R	0	0	255	0	255	255	255	0	0
Step 2	G	255	255	0	0	255	0	0	255	0
	В	0	0	0	255	0	255	255	0	255
	R	0	255	0	0	0	0	255		
Step 3	G	0	0	0	0	255	0	255		
	В	255	0	0	0	0	255	0		
	R			0	0	0	0			
Step 4	G			255	255	255	255			
	В			0	0	255	255			
	R			0	0	0	0			
Step 5	G			0	0	0	255			
	В			0	0	255	0			
	R			0	255	255	255			
Step 6	G			0	0	0	255			
	В			255	0	255	0			


		P10	P11	P12	P13	P14	P15	P16	P17	P18
	R	255	0	0	0	255	0	0	0	0
Step 1	G	0	0	0	0	0	255	0	127	0
	В	0	0	0	0	0	0	255	255	0
	R	0	255	0	0	255	127	127	127	255
Step 2	G	0	0	255	0	127	255	0	255	255
	В	255	0	0	255	0	0	255	127	255
	R					255	0	0	255	
Step 3	G					0	255	0	127	
	В					0	0	255	0	
	R					255	0	0	127	
Step 4	G					0	255	127	0	
	В					127	127	255	127	

10 Master / Slave function

The PX254 module has a built-in DMX-512 receiver and can be controlled from any desktop or controller running in this standard. Moreover, it is equipped with a programmable function of response to no DMX signal (*noS*). With 18 built-in default programs, it is possible to obtain interesting effects without an external controller. However, in larger installations, several PX254 drivers implementing the same program cannot provide a full playback synchronization. Therefore, PX254 has a Master feature. When it is activated, the module changes from a DMX receiver into a transmitter of this signal and sends programs to the other modules (which are set as Slave). If the Master


function is active, this is indicated by a fast flashing of the DMX signaling diode.

With this solution, it is possible to make a precise synchronization even in very large installations without using an external controller.

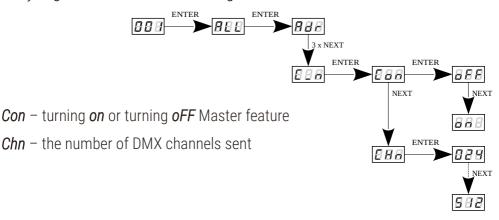

11 White balance


Sometimes, there can be problems with getting white color on the RGB series LEDs. This may be a result of using diodes with different technical parameters. For this reason, the PX254 module is equipped with a white balance function. This option allows for choosing a correct color temperature for full activation of all 3 outputs (white color).

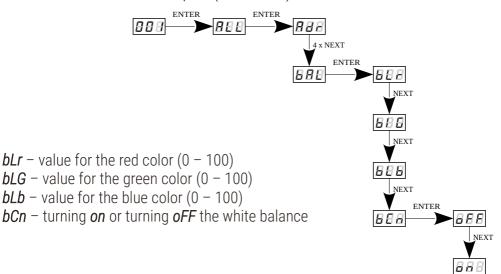

12 Limiting the output power

The white balance parameter, apart from its original functionality, can also be used to limiting the output power of the driver. It works linearly and in a percentage way limits the output power of a given channel.

For example, if the *bLr* parameter is set on 50, it means that by the DMX control and no signal mode this value can not be exceeded. The control will only operate within the range 0 - 50% of the output value for this channel.

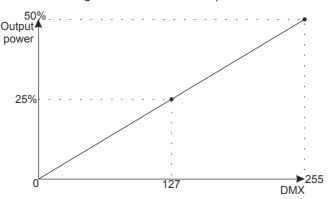

For the activate this function, the *bCn* parameter must be set to "*on*". Available power limitation values:

bLr – the output power limitation value for the red channel (0 - 100)%


- bLG the output power limitation value for the green channel (0 100)%
- bLb the output power limitation value for the blue channel (0 100)%
- *bCn* turning *on* or turning *oFF* the limiting the power output

The menu diagram for Limiting the output power is analogous to that in chapter 11 White balance (previous page).

13 Smooth

The driver is equipped with a smooth option. Smooth feature allows for smooth changes in lightness and colour. When it is set to On the transition between successive DMX values sent to the lamp (e.g. corresponding to changes in lightness) are smooth with no visible twitches, which prevents the common light "vibrations" effect. Two consecutive DMX values sent to the lamp are smoothed linearly between the DMX signal packets for the selected **B2P** option or the time interval set in the **EGR** menu in range 10 – 999ms.


The smooth function may slightly slow down the lamp's response rate to changes in the DMX signal; therefore, it is possible to disable this option. This can be done by checking the **BBS** parameter and confirming the selection by pressing "*enter*".

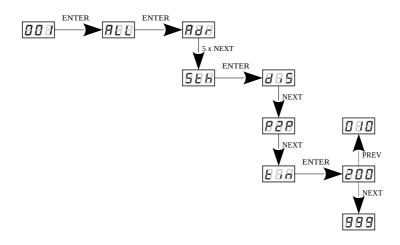

14 Light control frequency


The *Frq* function allows for setting the basic control frequency for the LEDs. This function is extremely useful in applications for the television industry. By applying the "*flicker free*" technology, it is possible to avoid the unpleasant flickering effect which is caused by improper signal synchronization that controls the LEDs. The user can choose from the available frequency range from 366Hz up to 25.0kHz which can be smoothly changed using the "*previous*" or "*next*" buttons and selecting a different value.

The frequency value in the upper range (e.g. 1.50 = 1.5kHz) helps to avoid the flickering effects that are visible in video cameras.

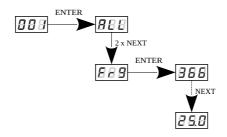

15 Screen saving (screen blanking)

The device is equipped with a feature that allows for turning off the backlight. This option is marked with the *SCr* sign. With this feature, the display is turned off after about 60s (if the keys of the device are not pressed). Of course, the device continues its operation without interfering with other parameters. Press any key to restore the backlight.

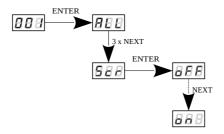

16 Default settings and device errors


If you have any difficulty accessing the device menu, e.g. it is not possible to enter a particular menu level or it is necessary to restore the device to its default settings, follow the instructions below.

In the first case, when a particular menu level cannot be accessed or menu items are displayed incorrectly, this may indicate that a saving-inmemory error has occurred. In such a case, try to restore the device to its default settings before sending the PX254 to the service center. If, after restoring to its default settings, the device still does not operate correctly, please send it to our service center.

16.1 Restore default settings

To restore the device to its default settings, press and hold the "*previous*" key while switching on the device. One of the messages that will be displayed will say *dFl*, which means successful restoring to default settings (the "*previous*" key has to be held down while powering on the device, until the *dFl* message is displayed).

If this message is accepted by pressing "*enter*", the default settings will be restored. The user can also exit this menu level without restoring the default settings. In order to do this, press the "*escape*" key.



Please note that after restoring to default settings, all the operating parameters of the device will revert to the following ones:

- DMX address: 1
- driver operating mode: RGB (3b 3 byte)
- master mode: off
- number of sent DMX channels: 128
- white balance: off
- no signal operating mode: scene (all channels controlled at 50%)
- frequency: 366Hz
- smooth function: off

16.2 Error message

The device is equipped with a built-in memory work control function. If there are problems with the memory operation on the PX254 display, the *Err* message appears – memory error.

In this situation, select the "*enter*" key. The device will reload the default configuration and upload it to the memory. If after this operation, the *Err* message remains on the screen, the memory is permanently damaged and the unit must be sent to the service point.


17 Display function

As the driver should be installed (As far as possible) in a small distance from the controlled LEDs, the lack of space may force the necessity of mounting the device upside-down. In such case the displayed messages become illegible, that does not have the influence on device operation, but makes the programming much more difficult.

That is why the PX254 driver has a display flip feature available. It turns the screen 180°. The keys order is reversed as well.

To activate this both middle buttons ("*previous*" and "*next*") of the driver have to be pressed in the same time for about 3s. To deactivate function the procedure is the same.

The figure on the next page shows how flip function works.

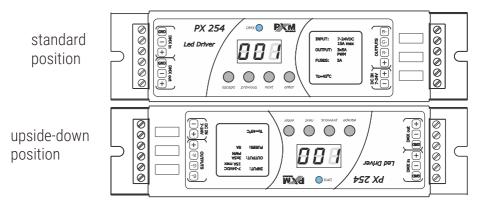


NOTE: The keys on the reverse of the display are set in the same way as the normal position, keys are reversed.

18 DMX signal connecting

PX254 have to be connected to DMX line in serial mode, with no branches on DMX control cable. That means that DMX line, from the signal source, must be connected to *DMX IN* pins of PX254 and later, directly from *DMX OUT* pins to the next device in DMX chain.

If the PX254 is the last DMX chain receiver there should be terminator (resistor 120 Ohm) mounted between "*DMX+*" and "*DMX-*" pins of *DMX OUT* section.



19 RDM – available parameters

The PX254 supports the DMX-RDM protocol. DMX protocol allows only of a one-way data transmission, while its extension the RDM protocol can transmit information in two directions. This makes possible to simultaneously send and receive information, and hence the possibility of monitoring activities of the compatible devices. Thanks to RDM some available settings of compatible devices may be programmed using this protocol.

Parameter name	PiD	Description
SUPPORTED_PARAMETERS	0x0050	all supported parameters
PARAMETER_DESCRIPTION	0x0051	description of additional parameters
DEVICE_INFO	0x0060	information concerning the device
SOFTWARE_VERSION_LABEL	0x00C0	firmware version of the device
DMX_START_ADDRESS *	0x00F0	DMX starting address of the device; Range 1 – 512
IDENTIFY_DEVICE *	0x1000	device identification; Two states are possible: identification is off (0x00 value) and identification is on (0x01 value).
STATUS_MESSAGES	0x0030	information about device status
DEVICE_MODEL_ DESCRIPTION	0x0080	device description, e.g. name


List of RDM parameters supported by the PX254:

Parameter name	PiD	Description
MANUFACTURER_LABEL	0x0081	manufacturer description, e.g. name
DEVICE_LABEL *	0x0082	additional device description; It is possible to enter an additional device description using up to 32 ASCII characters.
DMX_PERSONALITY	0x00E0	DMX operational mode
DMX_PERSONALITY_ DESCRIPTION	0x00E1	description of individual operational modes
DEVICE_HOURS	0x0400	operating time counted in hours
BALANCE_RED *	0x8011	value of control level of red channel balance
BALANCE_GREEN *	0x8012	value of control level of green channel balance
BALANCE_BLUE *	0x8013	value of control level of blue channel balance
SMOOTH_DIS_0/P2P_1/ TIM_2 *	0x801A	value of control level of blue channel balance
SMOOTH_TIME *	0x801B	Smooth time for <i>tiN</i> function chosen in subsection above
N0_SIG_P1-18 SC_19 ON_20 OFF_21 *	0x801C	choice of work mode for No DMX signal
SCENE_RED *	0x801D	settings of red channel value for scene saved in PX254
SCENE_GREEN *	0x801E	settings of green channel value for scene saved in PX254
SCENE_BLUE *	0x801F	settings of blue channel value for scene saved in PX254

Parameter name	PiD	Description
SCREENSAVER_ON/OFF *	0x8022	settings of screensaver (display backlight in PX254)
PROGRAM_SPEED *	0x8025	programs playback speed settings (playing next steps of program)
PROGRAM_FADE *	0x8026	settings of smooth transition between following steps of a program
BALANCE ON/OFF *	0x8027	to activate or deactivate the balance of output channels
PWM_FREQENCY *	0x8028	LEDs refresh frequency
SERIAL_NUMBER *	0x8030	device serial number
DISPLAY_FLIP *	0x8031	inverting the meter display 180 degrees


* - editable parameter

20 Programming

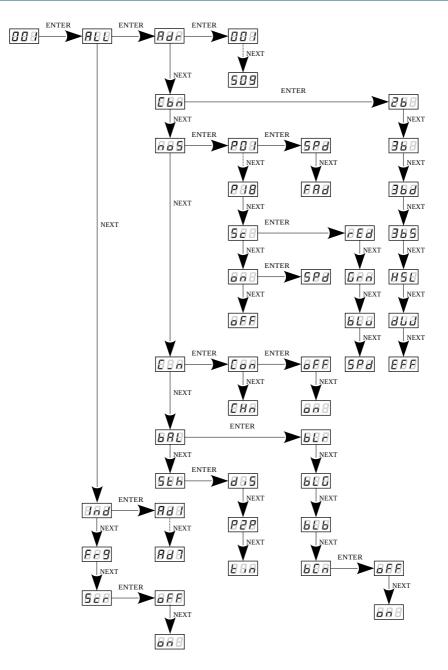


21 Connection scheme

a) for the PX254

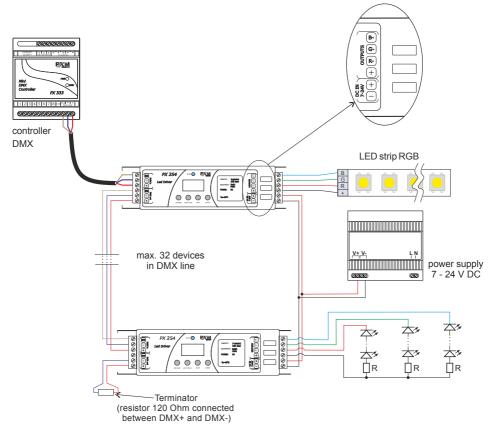

Note! The driver PX254 is common anode type device. It is possible to connect lamps with 4-wires cable with a common "+" only.


b) for the PX254-CC version

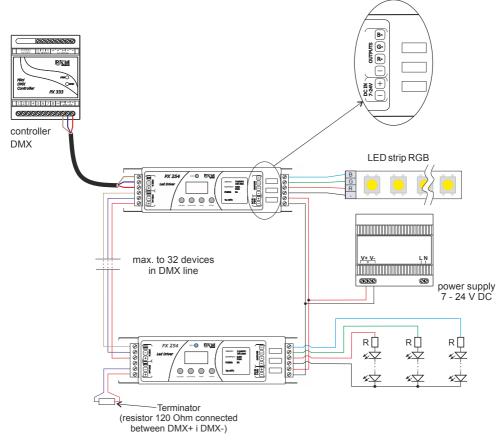

Note! The driver PX254-CC is common cathode type device. It is possible to connect lamps with 4-wires cable with a common "-" only.


Sample connection of warm and cold white LEDs strips for Dynamic White mode

a) for the PX254

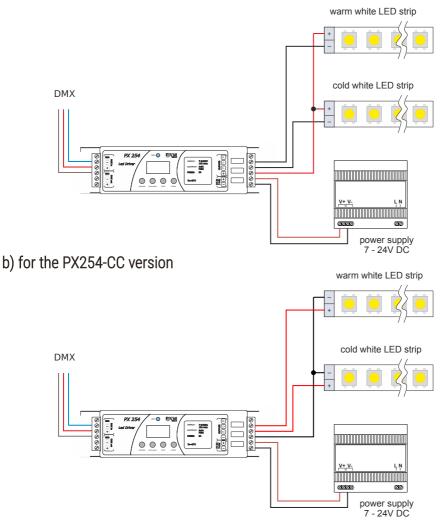

With such a connection of strips, in dW control mode, the value 0 on the color temperature channel corresponds to warm white color, and value 255 – cold white.

22 Dimensions

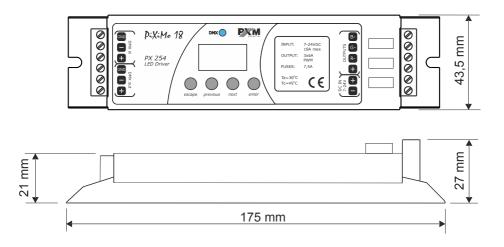

23 Technical data

type	PX254
DMX channels	512
RDM protocol support	yes
power supply	7 – 24V DC
max. current consumption	18A
power consumption without load	30mA for 12V DC 40mA for 24V DC
output channel number	3
interpolated resolution of output control	16 bit
programmable scenes	1
built-in programs	18
outputs current capacity	6A / channel
output sockets	screw connectors
Master mode	yes
weight	0.2kg
dimensions	width: 175mm height: 43,5mm depth: 26mm



DECLARATION OF CONFORMITY

PXM Marek Żupnik spółka komandytowa Podłęże 654, 32-003 Podłęże

we declare that our product:

Product name:

LED driver 3x6A

Product code:

PX254-OC PX254-CC

meets the requirements of the following standards, as well as harmonised standards:

PN-EN IEC 63000:2019-01 PN-EN 61000-4-2:2011 PN-EN IEC 61000-6-1:2019-03 PN-EN 61000-6-3:2008 EN IEC 63000:2018 EN 61000-4-2:2009 EN IEC 61000-6-1:2019 EN 61000-6-3:2007

and meets the essential requirements of the following directives:

2011/65/UE DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment Text with EEA relevance.

2014/30/UE DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast) Text with EEA relevance.



mgr inż. Marek Żupnik.