PX227
PX227-L0
DMX/0-10V
Interface 8ch

User manual



Table of Contents

I Description	4
2 Safety conditions	5
3 Connectors and control elements	6
4 Programming	7
4.1 Button features	7
4.2 Information parameters	7
4.3 Setting the DMX address	8
4.3.1 Setting the DMX address – L0 version	9
4.4 Characteristics of the output channels	
4.4.1 Characteristics of the output channels – version L0	12
4.5 Response to the loss of DMX signal	14
4.6 Smoothing function	18
4.7 Operation mode	19
4.8 Screen blanking	
4.9 Default settings and device errors	
4.9.1 Restore default settings	
4.9.2 Error message	23
5 Mounting	24
6 Menu scheme	25
7 Menu scheme – L0 version	26
8 RDM – available parameters	27
9 Device update	29
10 DMX signal connecting	30
11 Connection scheme	31
12 Dimensions	32
13 Technical data	33

Manufacturer reserves the right to make modifications in order to improve device operation.

PXM Marek Żupnik sp.k. Podłęże 654 32-003 Podłęże

32-003 Podłęże BDO register number 000005972 mail: info@pxm.pl www.pxm.pl

tel. +48 12 385 83 06

Rev.2-1 01.08.2022

1 Description

Demultiplexer DMX-512 signal on 0 - 10V.

The PX227 is designed to process the DMX512 signal to control the eight analog 0 - 10V outputs with accuracy $\pm 3\%$.

In addition to simple decoding DMX signal the PX227 allows to select the characteristics of control and program unit reacts to loss of DMX signal. Individually programmable parameters allow to define independent for each channel DMX address from range 1 – 512. What is more it is possible to arbitrarily assign multiple channels to a single address.

DMX / 0-10V Interface 8ch has been placed in a housing adapted for mounting on a 35mm DIN rail and is powered by a safe voltage of 12 - 24V DC.

From software version 2.06, support for the RDM protocol has been implemented.


NOTE! The following user manual applies to devices from serial number **21290007**.

2 Safety conditions

PX227 is a device powered by low voltage equal to 12 – 24V DC; however, please observe the following safety rules during its installation and use:

- 1. The device mat be connected to 12 24V DC with current-carrying capacity compatible with technical data.
- 2. All the conductors should be protected against mechanical and thermal damage.
- 3. In the event of damaging any conductor, it should be replaced with a conductor of the same technical data.
- 4. Only use a shielded cable for connecting the DMX signal.
- 5. All repairs and connection of outputs or DMX signal can only be made with cut off power supply.
- 6. PX227 should be strictly protected against contact with water and other liquids.
- 7. All sudden shocks, particularly dropping, should be avoided.
- 8. The device cannot be turned on in places with humidity exceeding 90%.
- 9. The device cannot be used in places with temperature lower than +2°C or higher than +40°C.
- 10. Clean with damp cloth only when the power is off.

3 Connectors and control elements

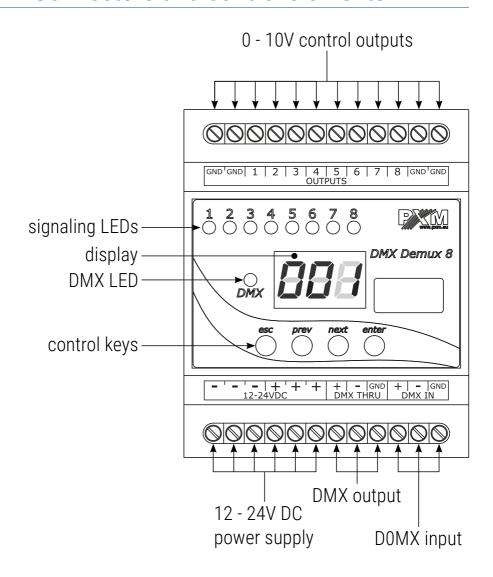

4 Programming

After switching on, the display shows the version of the program and information about the processor used (L0). Press *enter* to go the main menu, the display shows ALL or Adr in version L0. Press prev or next to select the programming menu and press enter to confirm.

4.1 Button features

esc – exits the currently programmed parameter without saving changes
 or takes you to a higher menu level


prev – takes to a lower menu lever or reduces the set values

next – takes to a higher menu level or increase the set values

enter – takes to device programming function and confirms the set values

4.2 Information parameters

In PX227-L0, the user can display the serial number on the screen of the device.




NOTE! This parameter is available only in the version with the *L0* processor.

4.3 Setting the DMX address

The menu of the PX227 device allows to set the DMX address of the device within the range 1-505.


To set the DMX address as a group:

- 1. Set the *Adr* function.
- 2. Use the *next* or *prev* buttons to set the desired DMX address. Press the *enter* button to confirm.



To set the DMX address individually:


- Set the *Ind* function.
- 2. Use the *next* or *prev* buttons to select the output channel and click enter.
- 3. Use the *next* or *prev* buttons to set the desired DMX address. Press the *enter* button to confirm.

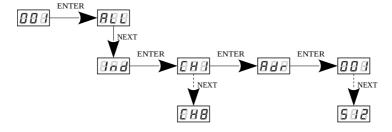

4.3.1 Setting the DMX address – L0 version

In the PX227-L0 version, the user can select a DMX address from the range 1 – 512 (when the *Cbn* operating mode is set to *8ch*), it means that if the user selects the address, e.g. 510, then channels 1 – 3 will take successively addresses 510, 511 and 512. Channels 4 – 8 will be assigned to address 512.


To set the DMX address in version L0 (PX227-L0), 8ch operating mode:



Additionally, in the *L0* version, the user by selecting *Cbn* (operating mode) on *Adv* (advanced) can set the DMX address as follows:

- SEQ sequence the user sets the DMX address from the range 1 512, and the next channels are assigned to the next DMX addresses.
 This means that if the user selects the address, for example: 508, then channels 1 5 will take successively addresses 508, 509, 510, 511 and 512. Channels 6 8 will be assigned to address 512.
- ALL setting all channels on one DMX address,
- Ind individual setting of DMX addresses for each channel.

To set the DMX address in the L0 version (PX227-L0) Adv operation mode:

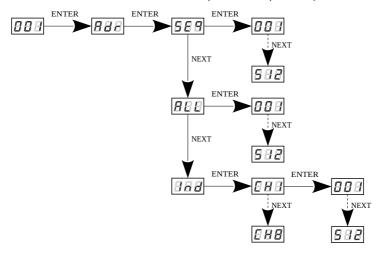

NOTE! Information whether the device is the *L0* version is displayed during device start-up.


4.4 Characteristics of the output channels

Available parameters:

- Lin linear characteristic 0 10V,
- FLu linear characteristic 1 10V,
- S_P switching characteristic (on / off),
- uSr user-defined characteristic, linear, ranging from Min to Max. The minimum and maximum values can be set in the range from 0 to 10V.


To set characteristics for all channels:

- 1. From the boot menu, enter the *ALL* group setting menu.
- 2. Press *enter* again to be able to change settings for all channels.
- 3. Select *Cur* with the *next* button, this will allow to change the dimming characteristics of the channels.

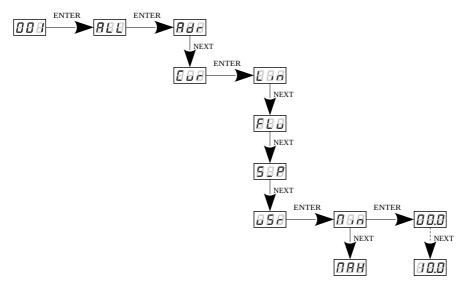

To set characteristics individually for all channels:

- From the start menu, enter the group settings menu Ind.
- 2. Use the *next* or *prev* buttons to select the output channel and click *enter*.
- 3. Select *Cur* with the *next* button, this will allow to change the dimming characteristics of the channels.

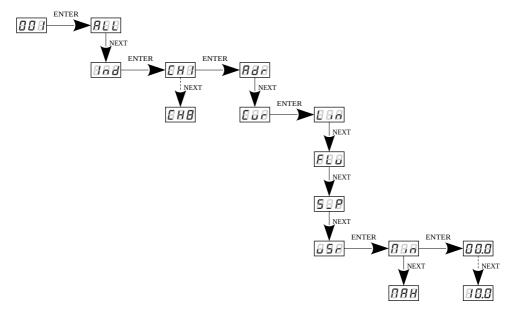


4.4.1 Characteristics of the output channels – version L0

The operating characteristics of individual outputs and all outputs in a device with an L0 processor are set in a similar way as described in point 4.4. Characteristics of the output channels. The user can set the $\it Cur$ characteristic for each channel individually by selecting $\it CH1$ – $\it CH8$ options or in groups for all outputs by selecting $\it ALL$.

Available parameters:

- Lin linear characteristic 0 10V,
- FLu linear characteristic 1 10V,
- S_P switching characteristic (on / off),
- uSr user-defined characteristic, linear, ranging from Min to Max. The minimum and maximum values can be set in the range from 0 to 10V.

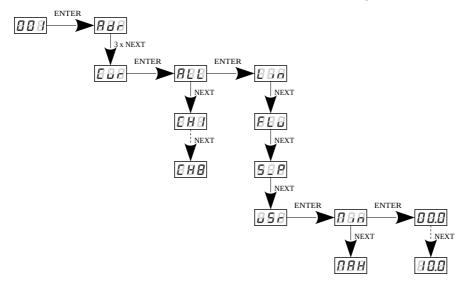

NOTE! Information whether the device is the *L0* version is displayed during device start-up.

4.5 Response to the loss of DMX signal

This function is used both to protect the system against the disappearance of DMX signal and to gain a specific state on outputs. After it has been activated, in case of a lack of DMX signal, the module will perform the selected function by itself. The reconnecting of DMX signal will automatically break the performed function, and the module will again be controlled by DMX signal.

The following options are available:

- **Pr1 Pr2** starting program 1 or 2,
- on switching all outputs on 100%,
- oFF complete switch-off of outputs,
- HLd holding the last DMX value,
- Sc1 Sc4 scene 1, 2, 3 or 4.

Up to 10 steps can be created in the program (F01 - F10), in each step it is possible to define the values of output channels (CH1 - CH8) in the range from 0 to 255. Additionally, in each step you can define its duration (Spd) in the range of 0,1 - 99,9 seconds. In the step it is also possible to set the transition smoothness (FAd) in the range from 0 (step transition) to 100 (completely fluid transition). It is possible to reduce the number of program steps, for this purpose, for this purpose, in step which should be last and after this step followed first step, select the on option in the End menu.

<u>Default programs (version L0):</u>

Steps	Pr1 (SPd 01.0 / FAd 050)	Pr2 (SPd 01.0 / FAd 050)
1	0000000	0000000
2	0000000	0000000
3	0000000	0000000
4	0000000	
5	0000000	
6	0000000	
7	0000000	
8	000000	
9	X	0000000
10	X	0000000


In each of the four scenes, you can statically program the values of each of the eight output channels separately in the range from 0 to 255.

Default scenes (version L0):


- Sc1 all channels set to 128,
- Sc2 all channels set to 0,
- Sc3 all channels set to 100,
- Sc4 all channels set to 255.

To run the function, enter the **noS** option:

- 1. From the boot menu, go to the **noS** settings and press enter.
- 2. Using the *next* or *prev* buttons select the behavior of the fixture on the disappearance of DMX signal.

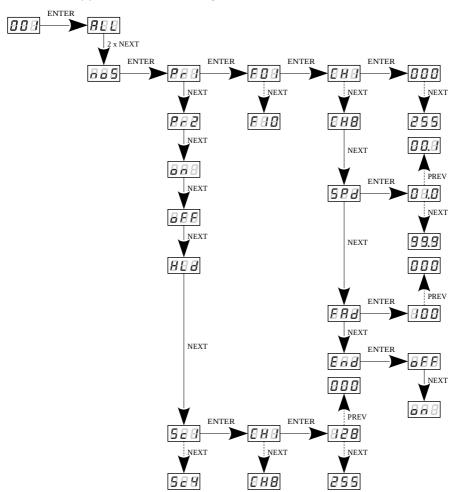

NOTE! In the *L0* version of the device, setting the response to the disappearance of the DMX signal is presented below. Information whether the device is the *L0* version is displayed during device start-up.

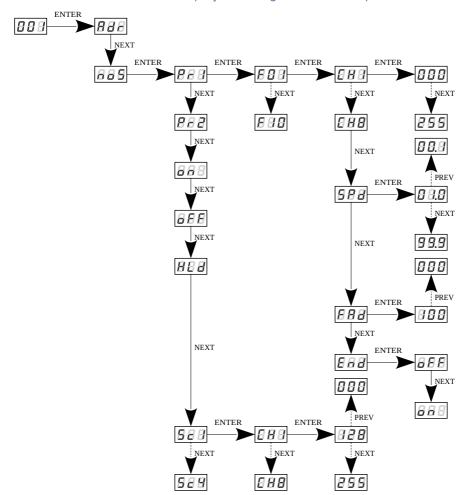


4.6 Smoothing function

The device also has the smoothing option. Smoothing allows for smooth color changes. When this option is enabled, switching between successive DMX values sent to channels is smooth, which prevents abrupt changes in voltage.


In order to start the smoothing function, enter the *Sth* option:

- 1. From the start menu go to the *Sth* settings and press *enter*
- 2. Use the *next* or *prev* buttons to select the smoothing function and confirm with the *enter* button

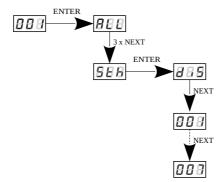

The enabled smoothing function can slightly slow down the device response to the change of DMX signal, so it is possible to switch off this option. In order to switch off smoothing, select *diS* parameter and confirm the selection with *enter*. The range from 1 to 7 are the levels of smoothing.

NOTE! In the *L0* version, the smoothing settings are presented below. Information whether the device is the *L0* version is displayed during device start-up.

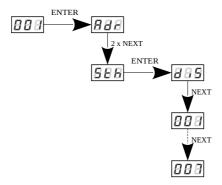

4.7 Operation mode


In the PX227-L0 device, the user can change the *Cbn* operating mode, which only affects the way of setting the DMX address:

- 8ch DMX address is set in groups for all channels,
- Adv the user has at his disposal the DMX address setting:
 - **Seq** sequentially,
 - ALL one address for all outputs,
 - *Ind* each output individually.

A detailed description of setting the DMX address can be found in section 4.3. Setting the DMX address.

NOTE! This parameter is available only in the version with the *L0* processor.

NOTE! By changing the working mode from *Adv* to *8ch* the DMX addresses will be set sequentially starting from the DMX address of channel 1 set in *Adv*.

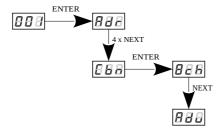


4.8 Screen blanking

The device has been equipped with the option of switching off backlight of the screen. This is provided by the *SCr* option. By using it, the display is switched off approx 60 seconds of inactivity (button unused). The device still operates without interfering with other parameters. Use any button to restore the backlight.


In order to activate the screen blanking function:

- 1. From the start menu enter the *SCr* settings and press *enter*
- 2. With next or prev change the values to on and confirm with enter

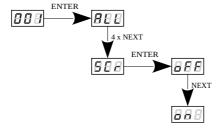

Similarly, you should follow in order to switch off this function, but then selecting **oFF**.

NOTE! In the L0 version of the device, setting the screen blanking is presented below. Information whether the device is the *L0* version is displayed during device start-up.

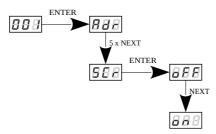

4.9 Default settings and device errors


If you have any difficulty accessing the device menu, e.g. it is not possible to enter a particular menu level or it is necessary to restore the device to its default settings, follow the instructions below.

In the first case, when a particular menu level cannot be accessed or menu items are displayed incorrectly, this may indicate that a saving-in-memory error has occurred. In such a case, try to restore the device to its default settings before sending the PX227 / PX227-L0 to the service center. If, after restoring to its default settings, the device still does not operate correctly, please send it to our service center.

4.9.1 Restore default settings

To restore the device to its default settings, press and hold the *previous* key while switching on the device. One of the messages that will be displayed will say *dFI*, which means successful restoring to default settings (the *previous* key has to be held down while powering on the device, until the *dFI* message is displayed).


If this message is accepted by pressing *enter*, the default settings will be restored. The user can also exit this menu level without restoring the default settings. In order to do this, press the *escape* key.



Please note that after restoring to default settings, all the operating parameters of the device will revert to the following ones:

- DMX address: 001
- no signal: **oFF**
- smooth: diS (003 in L0 version)
- characteristics of the output channels: *Lin* (on all channels)
- screen saver: oFF
- operation mode: 8ch

NOTE! In the device version *L0*, restoring the factory settings is additionally available from the device menu. Information whether the device is the *L0* version is displayed during device start-up.

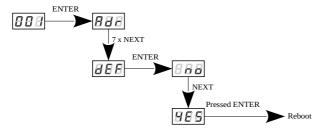

When the display shows the message *YES*, press and hold the *enter* button until the device resets.

4.9.2 Error message

The device is equipped with a built-in memory work control function.

If there are problems with the memory operation on the PX227 display, the *Err* message appears – memory error.


In this situation, select the *enter* key. The device will reload the default configuration and upload it to the memory. If after this operation, the *Err* message remains on the screen, the memory is permanently damaged and the unit must be sent to the service point.

5 Mounting


PX227 is installed on the mounting rail T35 in order to provide stable position and comfortable access to the device.

<u>Installation on the mounting rail:</u>


- 1. Set PX227 diagonally to the rail by hooking the two supports on the rear panel of the unit on the upper part of the assembly strip.
- 2. Pull the latch down using a screwdriver.
- 3. Attach the device to the rail, still holding a screwdriver in a latch.
- 4. Release the latch.

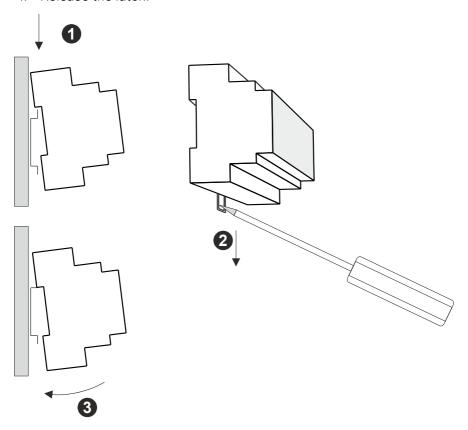

6 Menu scheme

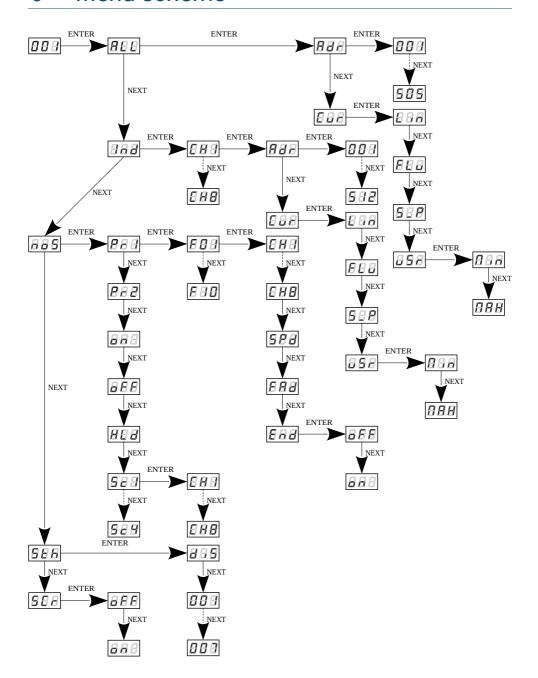

7 Menu scheme – L0 version

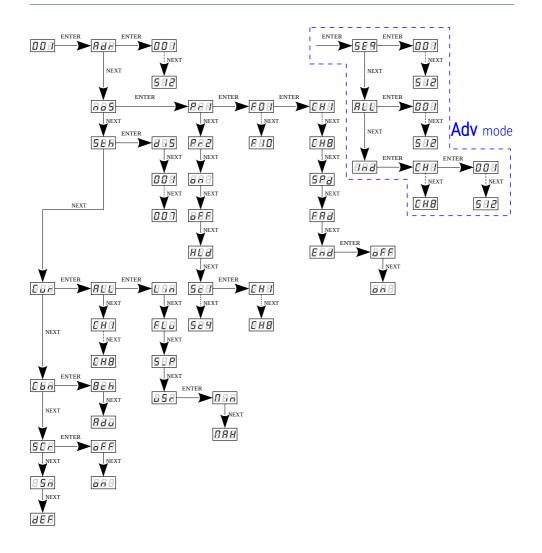

8 RDM – available parameters

The PX227 supports the DMX – RDM protocol. DMX protocol allows only of a one-way data transmission, while its extension the RDM protocol can transmit information in two directions. This makes possible to simultaneously send and receive information, and hence the possibility of monitoring activities of the compatible devices. Thanks to RDM some available settings of compatible devices may be programmed using this protocol.

List of supported RDM parameters by PX227:

Parameter name	PiD	Description
SUPPORTED_PARAMETERS	0x0050	all supported parameters
PARAMETER_DESCRIPTION	0x0051	description of additional parameters
DEVICE_INFO	0x0060	information concerning the device
SOFTWARE_VERSION_LABEL	0x00C0	firmware version of the device
DMX_START_ADDRESS *	0x00F0	DMX starting address; Range 1 - 512
IDENTIFY_DEVICE *	0x1000	device identification; Two states are possible: identification disabled (value 0x00) and identification enabled (value 0x01)
DEVICE_MODEL_ DESCRIPTION	0x0080	device description, e.g. name
MANUFACTURER_LABEL	0x0081	manufacturer description, e.g.

Parameter name	PiD	Description
DEVICE_LABEL *	0x0082	additional device description; It is possible to enter an additional device description using up to 32 ASCII characters
FACTORY_DEFAULTS	0x0090	device default settings
PERSONALITY	0x00E0	DMX operational mode
PERSONALITY_ DESCRIPTION	0x00E1	description of individual operational modes
SMOOTH_OFF/1/2/3/4/5 *	0x801A	selecting an option for the Smooth function
NO_SIGNAL_OFF/ON/HLD/S *	0x801C	selection of operating mode for no DMX signal
OUTPUT_RANGE_MIN_0-100	0x804A	minimum value in the user-defined characteristic, set from 0 to 100
OUTPUT_RANGE_MAX_0-100	0x804B	maximum value in the user-defined characteristic, set from 0 to 100
SCREENSAVER_ON/OFF *	0x8024	screen saver setting
SERIAL_NUMBER	0x8030	device serial number
CURVE_0/1/2/3 *	0x8049	setting the characteristics of the output channels (Lin, Fluo, Switch, User)

^{* -} editable parameter

9 Device update

The update is possible using the PX313 USB / RS485 In device – details can be found in the manual for this module. The device update was also presented in

The device update was also presented in

detail on our YouTube channel.






https://www.youtube.com/watch?v=ISIFGeXVR_k


10 DMX signal connecting

PX227 have to be connected to DMX line in serial mode, with no branches on DMX control cable. That means that DMX line, from the signal source, must be connected to *DMX IN* pins of PX227 and later, directly from *DMX OUT* pins to the next device in DMX chain.


If the PX227 is the last DMX chain receiver there should be terminator (resistor 120 Ohm) mounted between "+" and "-" pins of *DMX OUT* section.




11 Connection scheme

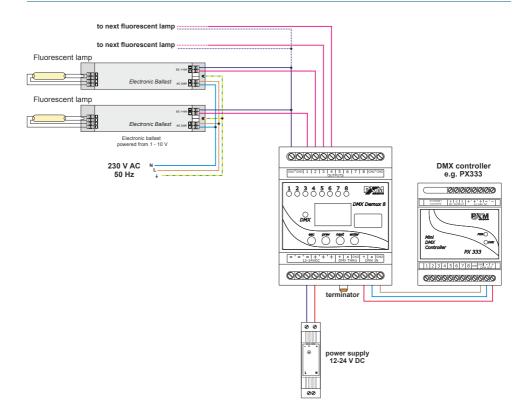

12 Dimensions

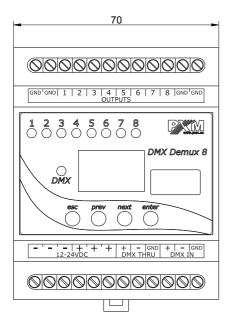

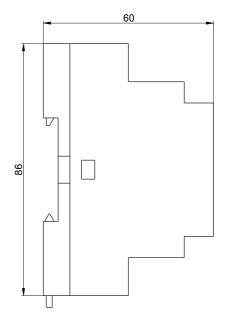

13 Technical data

type	PX227 PX227-L0
power supply	12 – 24V DC
number of DMX channels	512
RDM protocol	yes (from version 2.06)
number of output channels	8
voltage on outputs	$0 - 10V (\pm 3\%)$
output sockets	screw terminals
power consumption without load	max. 0.5W
outputs load	max. 30mA / channel
weight	0.14kg
dimensions	width: 70mm (4 modules) height: 86mm depth: 60mm



DECLARATION OF CONFORMITY

PXM Marek Żupnik spółka komandytowa Podłęże 654, 32-003 Podłęże

we declare that our product:

Product name: DMX/0-10V Interface 8ch

Product code: PX227

meets the requirements of the following standards, as well as harmonised standards:

PN-EN IEC 63000:2019-01 EN IEC 63000:2018
PN-EN 61000-4-2:2011 EN 61000-4-2:2009
PN-EN 61000-6-1:2019-03 EN IEC 61000-6-1:2019
PN-EN 61000-6-3:2008 EN 61000-6-3:2007

and meets the essential requirements of the following directives:

2011/65/UE **DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment Text with FFA relevance

2014/30/UE **DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast) Text with EEA relevance.

Marek Żupnik spółka komandytowa 32-003 Podlęże, Podlęże 654 NIP 677-002-54-53

mgr inż. Marek Żupnik.